

*Coventry Climax*

**F.W.A., F.W.B. and F.W.E.  
ENGINES**

•  
**WORKSHOP  
MANUAL**  
•

COVENTRY CLIMAX ENGINES LTD  
WIDDINGTON ROAD · COVENTRY · ENGLAND

# Coventry Climax

## F.W.A., F.W.B. and F.W.E. ENGINES WORKSHOP MANUAL

### CONTENTS

	PAGE
LEADING PARTICULARS .....	4
GENERAL DESCRIPTION .....	7
PERIODICAL ATTENTION .....	8
ENGINE OVERHAUL .....	9
FITS AND CLEARANCES .....	25
APPENDICES .....	A1








# ENGINE OVERHAUL

## CONTENTS

Chapter	Page
1 Carburettors—Removing and Replacing ... ..	8
2 Carburettors—Maintenance Attention ... ..	8
3 Induction Manifold—Removing and Replacing ... ..	11
4 Distributor—Removing and Replacing ... ..	11
5 Distributor—Maintenance Attention ... ..	12
6 Cam Box Cover—Removing and Replacing ... ..	12
7 Valve Tappet Clearance checking ... ..	13
8 Camshaft and Tappet Block—Removing and Replacing...	13
9 Valve Tappet Clearance—Adjusting ... ..	13
10 Cylinder Head—Removing and Replacing ... ..	13
11 Valves—Removing and Replacing ... ..	14
12 Decarbonising ... ..	15
13 Valve Guides—Renewing ... ..	15
14 Sump—Removing and Replacing ... ..	16
15 Oil Pump—Removing and Replacing ... ..	16
16 Oil Pump—Maintenance Attention ... ..	16
17 Cylinder Liners, Pistons and Connecting Rods—Removing and Replacing ...	16
18 Pistons and Connecting Rods—Dismantling and Assembling ... ..	17
19 Timing Cover—Removing and Replacing ... ..	18
20 Valve Timing ... ..	18
21 Water Pump—Maintenance Attention ... ..	19
22 Distributor and Oil Pump Drive Shaft—Removing and Replacing ... ..	19
23 Jackshaft—Removing and Replacing ... ..	19
24 Crankshaft—Removing and Replacing ... ..	20
25 Crankshaft—Regrinding ... ..	21
26 Dynamo—Maintenance Attention ... ..	22
27 Starter—Maintenance Attention ... ..	22

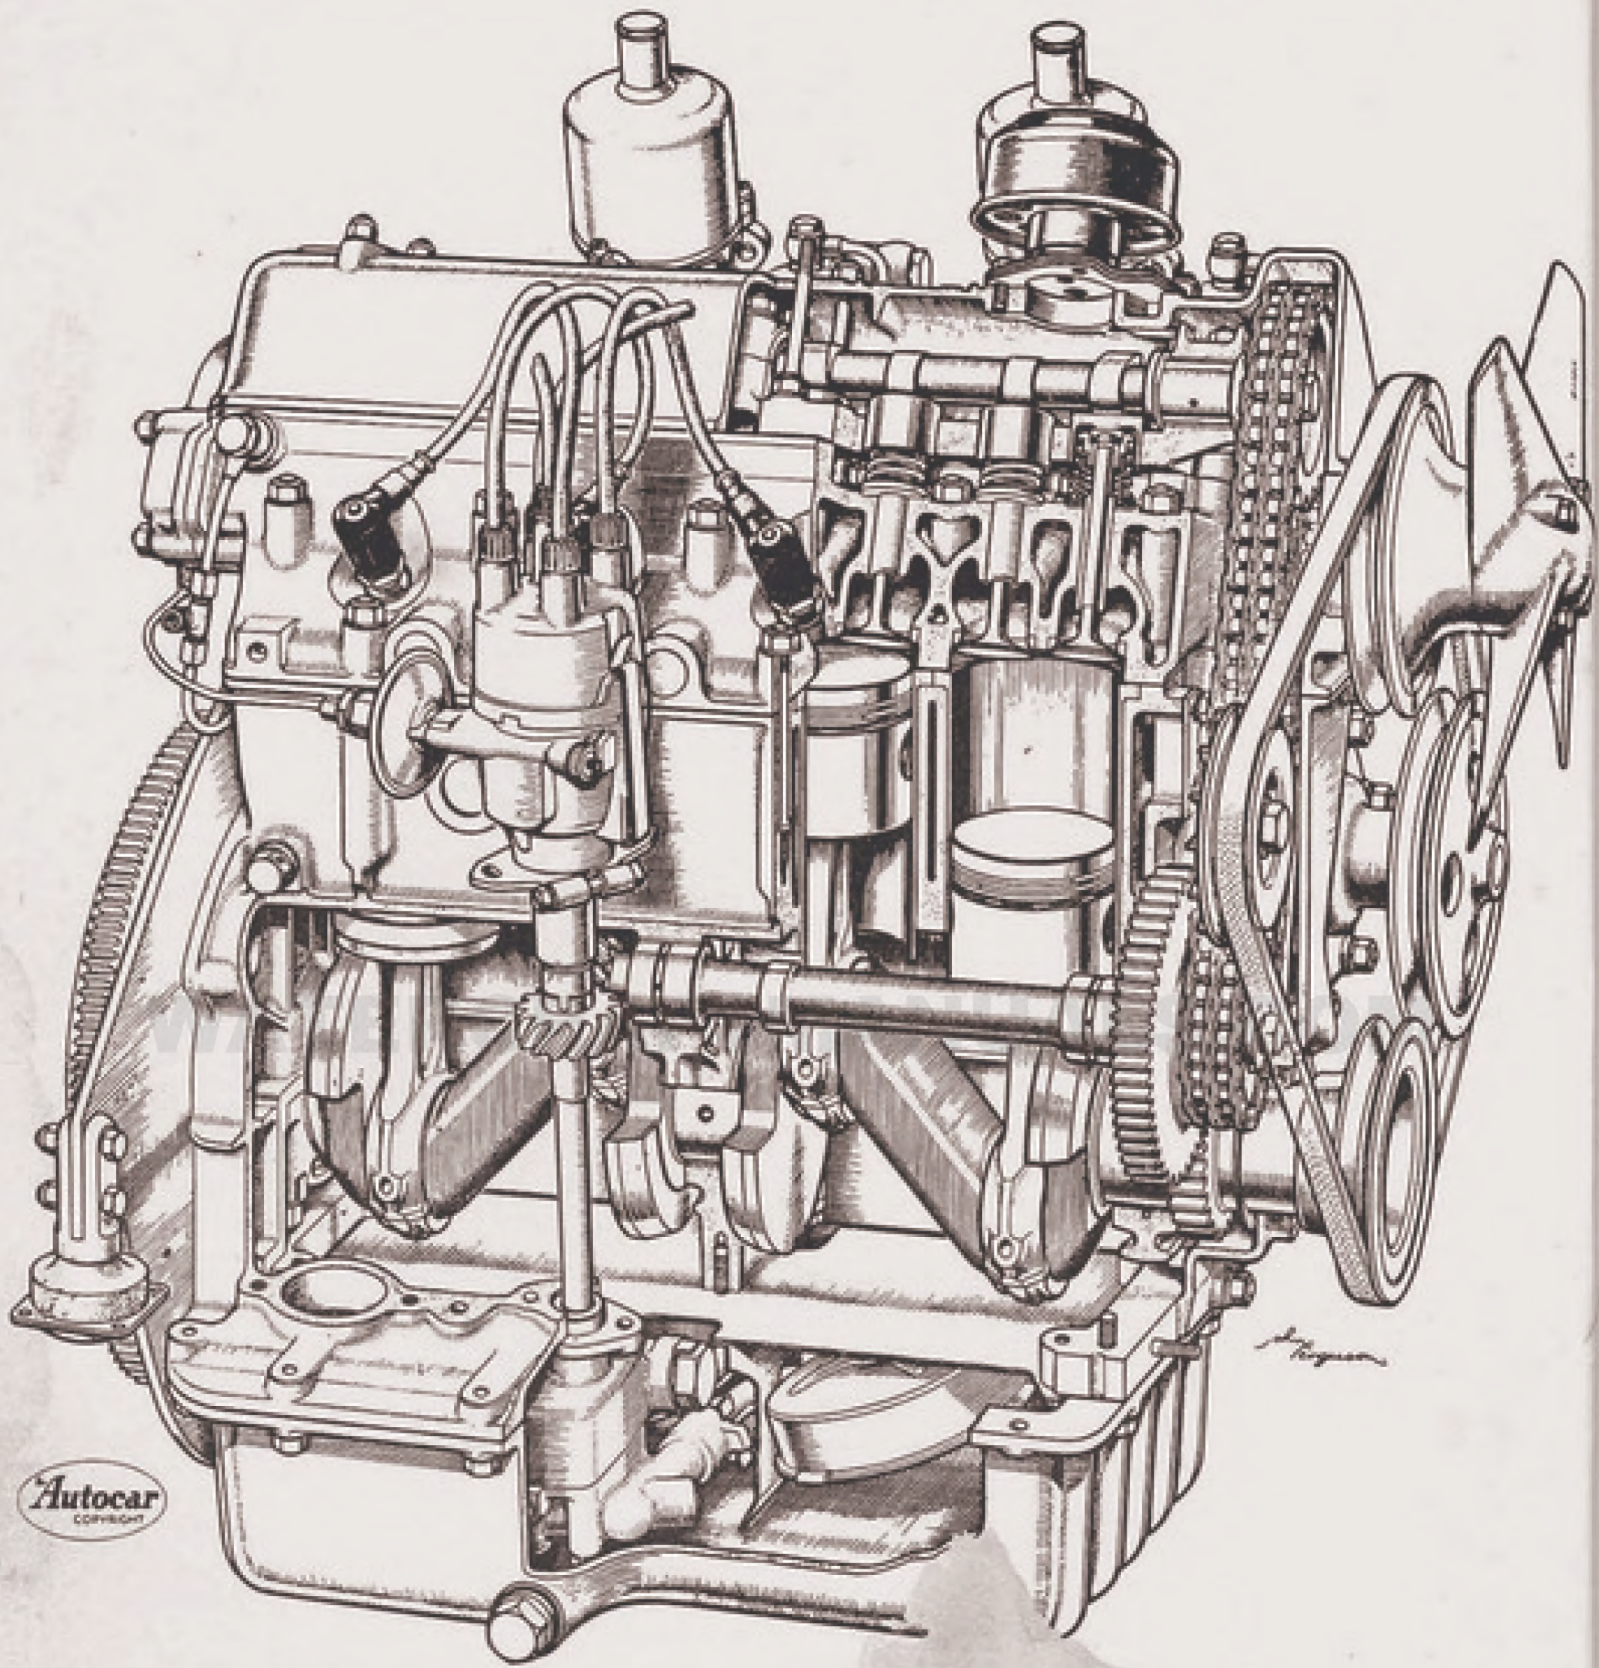

Autocar  
COPYRIGHT

THE COVENTRY CLIMAX TYPE A ENGINE  
(By kind permission of "The A. C. C.")