INTRODUCTION

This manual is in supplement to the regular 20 H.P. service manual. This manual pertains only to the Autolectric engine, and only to the electrical portion of this engine. All other information will be found in the regular 20 H.P. service manual, as to power head, lower unit, etc. This manual is set up in four sections - Troubleshooting, Removal, Bench Testing and Re-assembly.

| SECTION | | PAGE |
|---------|--------------------------------|------|
| 1 | TROUBLESHOOTING | 3 |
| 2 | REMOVING ELECTRICAL SYSTEM | 13 |
| 3 | BENCH TESTING COMPONENT PARTS | 17 |
| 4 | REASSEMBLY | 21 |
| | WIRING DIAGRAM | 28 |
| | ELECTRICAL TEST SPECIFICATIONS | 30 |
| | | |

Special Tools Required For Servicing This Engine:

| SPECIAL TOOL | SPECIAL | TOOL NUMBER |
|----------------------|---------|----------------|
| Armature Puller | | T 2984 & T2983 |
| Knock-Off Sleeve | | - T 2958 |
| Circuit Tracer | | - T 2938 |
| 12 - Volt Test Light | | - Т 2951 |