

STERN DRIVE TECHNICIAN'S HANDBOOK - MANUAL OUTLINE

Section 1 - General Information

- A - General Information
- B - Troubleshooting

Section 2 - Alpha Stern Drive

- A - Installation and Adjustments
- B - Drive Shaft Housing
- C - Standard Rotation
Gear Case
- D - Counter Rotating
Gear Case
- E - Transom Assembly

Section 3 - Bravo Stern Drive

- A - Installation and Adjustment
- B - Drive Shaft Housing
- C - Bravo I
- D - Bravo II
- E - Bravo III
- F - Bravo Power Shift
- G - Transom Assembly

Section 4 - Blackhawk Stern Drive

- A - Upper Drive Unit
- B - Lower Drive Unit

Section 5 - Power Steering

Section 6 - Trim System

- A - Oildyne Trim Pump
- B - Trim Cylinder
- C - Dual Power Trim

Section 7 - Corrosion Protection

Section 8 - Drive Shafts