

Table of Contents

	Page
MerCruiser IIIA Sterndrive	1
Gear Ratio Identification	1
Driveshaft Housing Exploded View	2
Gear Housing Assembly Exploded View (Driveshaft)	5
Gear Housing Assembly Exploded View (Propshaft)	7
Specifications	9
Torques	9
Drive Shaft Housing	9
Gear Housing	9
Upper Gears	10
Gearcase Housing	10
Rolling Preload Torques	10
Driveshaft Housing	10
Driveshaft Housing	
Shimming Tool Chart	10
Shimming Specifications Lower	10
Drive Shaft Housing	
Spacers and Shims	11
Gearcase Housing Snap Rings,	
Spacers and Shims	11
Special Tools	11
Factory Tool Kits	11
General Required Tools	11
Drive Dimensions	12
Drive Lubricant Capacity	12
Service U-Joint Assembly	12
U-Joint Inspection	
Pre-disassembly	12
Driveshaft Disassembly	13
Inspection - After Disassembly	13
Driveshaft Reassembly	14

	Page
Disassembly Drive Shaft Housing	14
Back Cover	14
Drive Shaft Removal	16
Pinion Gear Removal	16
Front Bearing Cup And Seal Removal ...	17
Brass Nut Removal	18
Driven Gear Removal	18
Front Cover	20
Assembly Drive Shaft Housing	21
Front Cover	21
Bearing Cup And Seal	22
Pinion Gear	23
Drive Shaft	24
Back Cover	25
Bearing Preload Check	
(Assembled)	26
Bearing Preload Check	
(Disassembled)	27
Driven Gear	28
Preload (Driven Gear)	
Before Brass Nut	30
Preload (Driven Gear)	
After Brass Nut	31
Gear Location (Shimming)	32
Checking Driveshaft Back Lash	33
Disassembly IIIA SSM	
Gear Housing (Left Hand Rotation)	34
Reassembly IIIA SSM	
Gear Housing (Left Hand Rotation)	34
Disassembly IIIA SSM	
Gear Housing (Right Hand Rotation)	34
Reassembly IIIA SSM	
Gear Housing (Right Hand Rotation)	34