# **Models Covered**

#### Sterndrive

Models Covered	Serial Number
QSD 2.8 Sterndrive 170 HP	88300400 - 88304999
QSD 2.8 Sterndrive 200 HP	88305400 - 88309999
QSD 2.8 Sterndrive 230 HP	88310400 - 88314999
QSD 4.2 Sterndrive 270 HP	88401000 - 88404999
QSD 4.2 Sterndrive 320 HP	88406000 - 88415999
QSD 4.2 Sterndrive 350 HP	88417000 - 88419999

#### Inboard

Models Covered	Serial Number
QSD 2.8 Inboard 170 HP	88300000 - 88300399
QSD 2.8 Inboard 200 HP	88305000 - 88305399
QSD 2.8 Inboard 230 HP	88310000 - 88310399
QSD 4.2 Inboard 270 HP	88400000 - 88400999
QSD 4.2 Inboard 320 HP	88405000 - 88405999
QSD 4.2 Inboard 350 HP	88416000 - 88416999

## Notice To Users Of This Manual

Throughout this publication, dangers, warnings, cautions, and notices, (accompanied by

the International HAZARD Symbol (a) are used to alert the mechanic to special instructions concerning a particular service or operation that may be hazardous if performed incorrectly or carelessly. These safety alerts follow ANSI standard Z535.6-2006 for product safety information in product manuals, instructions, and other collateral materials. **OBSERVE THEM CAREFULLY!** 

These safety alerts alone cannot eliminate the hazards that they signal. Strict compliance to these special instructions when performing the service, plus common sense operation, are major accident prevention measures.

#### **A** DANGER

Indicates a hazardous situation which, if not avoided, will result in death or serious injury.

## **A** WARNING

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

## **A** CAUTION

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.