

# THE OLIVER CORPORATION

OUTBOARD MOTOR DIVISION

108 SOUTH McCAMLY STREET • BATTLE CREEK, MICHIGAN



TO: All Distributors and Dealers

SUBJECT: Oliver Outboard Motor Repair Manual

Section I - The General Information Section of the repair manual is attached. It is being sent to every distributor and dealer for his reference.

Section II - The Powerhead Section is being finalized and will be available shortly.

Additional sections of this manual will be developed and will be sent to you as they are finished. Revisions and additions will be made periodically to keep the repair manual information up to date with current production models. Additional copies of each section of the manual are available from Oliver for a nominal fee which will cover our printing and mailing costs.

Any comments as to how the repair manual can be improved will be greatly appreciated. This is your publication for your use. Let us know what you think of this first section of the Oliver Outboard Motor Repair Manual.

Service Department

## SERVICE MANUAL

The service manual is available to all distributors and dealers for a nominal cost.

This publication includes service information, sales promotion, parts books, suggested repair parts lists, and price lists.

Under service information, the Oliver Corporation has compiled a repair manual for field use. It contains all of the repair information, disassemblies and reassemblies, data and specifications for servicing all Oliver outboard Motors manufactured to date.

Some of the latter data is now being assembled and Section I is included here for your review.

OUTBOARD MOTOR DIVISION  
BATTLE CREEK, MICHIGAN

I N D E X

SECTION I - GENERAL INFORMATION		PAGE
1-1	INTRODUCTION	1
1-2	WARRANTY INSTRUCTIONS	1
1-3	SERIAL NUMBER	1
1-4	RETURN OF MOTORS	2
1-5	"A HAPPY CUSTOMER"	2
1-6	"PRE-CHECK" LIST	2-3-4
1-7	TANK TESTING THE NEW MOTOR	4
1-8	O.B.C. FOR SAFETY	4
1-9	ATTACHING MOTOR TO BOAT	4-5-6
1-10	REMOVING MOTOR FROM BOAT	7
1-11	CAVITATION	7
1-12	TILT-LOCK ADJUSTMENT	7-8
1-13	BEAKING IN THE NEW MOTOR	8
1-14	STARTING	8-9-10
1-15	OPERATION	10
1-16	STOPPING	10
1-17	EMERGENCY STARTING	11
1-18	IMMEDIATE ATTENTION GIVEN SUBMERGED MOTOR	11-12
1-19	SALT WATER OPERATION	12
1-20	STORAGE OF MOTOR	12-13
1-21	PREPARATION FOR USE AFTER STORAGE	13
1-22	FUEL AND LUBRICATION	13-14-15-16-17
1-23	CARBURETOR ADJUSTMENT	14
1-24	GEAR SHIFT OPERATION	18
1-25	MAGNETO OPERATION	18
1-26	ELECTRICAL MAINTENANCE	18-19
1-27	SPARK PLUGS	19
1-28	REVERSE CATCH AND TILT LOCK	20
1-29	WATER PUMP OPERATION & EXHAUST SYSTEM	20
1-30	OIL LEAKAGE	21
1-31	PREVENTATIVE MAINTENANCE	21
1-32	MOTOR TROUBLE CHECK LIST	21-22-23
1-33	MOTOR SPECIFICATIONS	23-24-25
1-34	TOLERANCES AND WEAR LIMITS	26
1-35	TORQUE SPECIFICATIONS	27-28-29-30
1-36	PART NUMBERING SYSTEM	31-32

ILLUSTRATIONS

- FIGURE 1-1 NAUTICAL TERMS
- FIGURE 1-2 MOUNTING MOTOR ON A BOAT TRANSOM
- FIGURE 1-3 PROPER TILT ANGLE OF MOTOR
- FIGURE 1-4 FILLING THE OLIVER MIX-MATIC FUEL TANKS
- FIGURE 1-5 FILLING THE OLIVER TEND-A-MATIC FUEL TANKS
- FIGURE 1-6 FILLING THE GEAR CASE HOUSING
- FIGURE 1-7 LUBRICATION AND OIL CHART FOR OLIVER 35 HP MOTORS
- FIGURE 1-8 LUBRICATION AND OIL CHART FOR OLIVER 16 HP MOTORS
- FIGURE 1-9 LUBRICATION AND OIL CHART FOR OLIVER 6 HP MOTORS
- FIGURE 1-10 SPARK PLUG ELECTRODE GAP COMPARISON
- FIGURE 1-11 USING A TORQUE WRENCH TO OBTAIN PROPER TORQUE SETTING