

Contents

QUICK REFERENCE DATA IX

CHAPTER ONE

GENERAL INFORMATION 1

Manual organization	1	Lubricants	8
Notes, cautions and warnings	1	Gasket sealant	10
Torque specifications	2	Galvanic corrosion	11
Engine operation	2	Protection from galvanic corrosion	13
Fasteners	2	Propellers	14

CHAPTER TWO

TOOLS AND TECHNIQUES 21

Safety first	21	Service hints	28
Basic hand tools	21	Special tips	30
Test equipment	26	Mechanic's techniques	31

CHAPTER THREE

TROUBLESHOOTING AND TESTING 33

Test equipment	33	Charging system	56
Troubleshooting preparation	37	Fuses and wire harness	58
Operating requirements	37	Trim system	60
Starting difficulty	37	Electrical testing	60
Fuel system component testing	38	Power head	66
Ignition system testing	42	Cooling system	74
Warning system	49	Gearcase	76
Starting system	51		

CHAPTER FOUR

LUBRICATION, MAINTENANCE AND TUNE-UP 87

Lubrication and maintenance	88	Tune-up	110
Routine maintenance	94	Special maintenance requirements	115

CHAPTER FIVE

SYNCHRONIZATION AND ADJUSTMENT 122

Fuel system adjustment	122	Valve adjustment	131
Carburetor synchronization	129	Cable and linkage adjustment	136

CHAPTER SIX

FUEL SYSTEM 145

Servicing the fuel system	145	Float level (9.9, 25 and 80-100 hp models)	182
Fuel tank	149		

CHAPTER SEVEN

ELECTRICAL AND IGNITION SYSTEM 189

Starting system	194	Ignition system	213
Starter motor	197	Warning system	226
Charging system	211		

CHAPTER EIGHT

POWER HEAD 234

Flywheel removal and installation	234	Inspection	269
Cylinder head	243	Power head installation	286
Cylinder head	253	Bearing selection	311
Oil pump	262		

CHAPTER NINE

GEARCASE AND DRIVE SHAFT HOUSING 322

Gearcase operation	322	Water pump	331
Gearcase identification	323	Gearcase disassembly and assembly	339
Propeller removal and installation	324	Inspection	360
Gearcase removal and installation	324	Drive shaft housing removal and installation	362

CHAPTER TEN

REWIND STARTER 381

CHAPTER ELEVEN

POWER TRIM AND MIDSECTION 395

Power trim system	395	Midsection	412
Fluid filling and air bleeding	411		

CHAPTER TWELVE
REMOTE CONTROL 423

INDEX. 434

WIRING DIAGRAMS 437

WATERCRAFTMANUALS.COM